

GMC Sonoma | 1986-1994 Car Radio Removal



STEP 1:

Open the glove box. Locate and remove two (2) phillips screws that secure the right side of the plastic dash panel surrounding the radio.



STEP 2:

Pull out the ashtray to its extended position. Locate and remove one (1) phillips screw at the bottom left corner under the plastic dash panel.



STEP 3:

Once all 3 screws have been removed, the dash can be pulled away from the radio.

The radio is secured to the dash by plastic brackets attached to the side of the radio.

Locate and remove two (2) 7mm bolt screws that secure these brackets to the dash.



STEP 4:

Pull the radio out of the dash. Unplug the black cable plugged into the rear of the radio. Unplug the plastic wire harness connector from the rear of the radio.

Plastic wire harness note:

1986 to 1989 models: There will be 3 plastic connectors: (1) blue, (1) white, (1) black.

1989 and newer models: There will be 1 white or blue connector.