

Nissan Maxima | 1989-1993 Car Radio Removal



STEP 1:

Pull out the ashtray. Locate and remove two (2) phillips screws below the ashtray and cigarette lighter.



STEP 2:

You will need to remove the plastic trim panel that surrounds the gear shift area. This panel simply unsnaps by lifting it up with your hands.



STEP 3:

Once the screws at the bottom of the dash have been removed, the dash unsnaps at the top and sides. For best results, start by grabbing the top of the dash and pulling outward until the top and sides unsnap.

At the bottom of the dash is a comfort switch which prevents the bottom of this dash panel from pulling forward out of the dash. You will need to lift the plastic dash panel UP so that the bottom of the comfort switch connector lifts out of the dash.

Unplug the connector attached to the rear of the hazard switch. Unplug the connector at the bottom of the comfort switch.



STEP 4:

Once the dash panel surrounding the radio and air conditioner has been removed, the brackets that secure the radio/pocket assembly can be seen. The radio is attached to the pocket below the radio by these brackets and both remove as one unit.

Locate and remove four (4) phillips screws that secure the radio/pocket assembly.



STEP 5:

Pull the radio/pocket assembly out of the dash. Unplug the black cable plugged into the rear of the radio. Unplug 2 white plastic wire harness connectors snapped into the rear of the radio.