

Honda Accord | 1989-1993

Car Radio Removal



STEP 1:

To begin, you are going to remove the center dash console. Locate and remove two (2) phillips screws on each side of the center dash console



STEP 2:

The center dash console removes very easily. Lift the rear of the center dash console up as seen in the photo above. Pull it back, away from the main dash assembly and set it aside out of the way.



As seen in the top right photo, you will have direct access to the ashtray and have enough room to insert a screwdriver or socket.




STEP 3:

Pull out the ashtray.

The ashtray slides into a metal bracket which needs to be removed. This metal bracket is secured to the dash with three (3) phillips screws. (2) screws are at the front top of the metal bracket, and (1) screw is at the very back of the metal bracket.

Remove all (3) screws and pull out the metal ashtray bracket and let it fall out of the way.

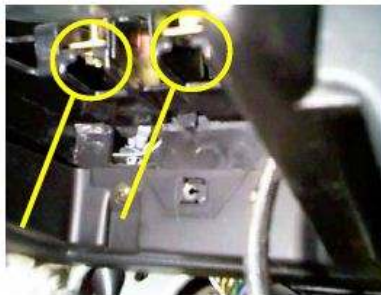

STEP 4:

Once the metal ashtray bracket is removed, you will have direct access to the (2) 8mm bolts that secure the radio/pocket assembly to the metal bracket inside the dash.

Locate and LOOSEN the (2) 8mm bolts. You do not need to completely remove the bolts, only loosen them enough for the radio's mounting bracket to loosen from the metal bracket inside the dash.



STEP 5:

Once the 8mm bolts have been loosened, grab the radio/pocket assembly and pull it forward out of the dash.

Unplug the black cable plugged into the rear of the radio. Unplug the white plastic wire harness connector snapped into the rear of the radio.